

IMPORTANT!

*Carefully read installation instructions
before attempting to use these
safety bath mats!*


***YOUR BATHTUBS MUST BE
COMPLETELY CLEAN AND DRY!***

Cleaning Instructions


Your safety bath mats are best maintained by using any all-purpose industrial liquid cleanser. Spray on liquid cleanser, then scrub mat with a **NYLON BRISTLE BRUSH** and rinse thoroughly. For grease or tar, you may use any water-based degreaser and repeat the above cleaning instructions.

IMPORTANT INSTALLATION INSTRUCTIONS


Your tub must be completely clean and dry before installing!
Prep tub with alcohol or industrial cleanser to remove any excess oils on surface.

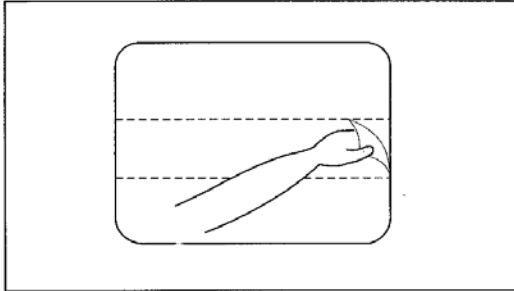


- 1** Lay mat upside down. With fingernail, peel backing off of the center of the mat. Always be careful not to touch adhesive side of mat. The center strip is scored for easy removal.

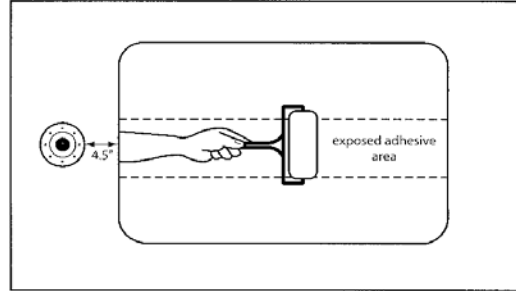

- 2** Flip mat over and place as desired on tub. **Mat should be placed at least 4 inches behind the drain.** Check for centering position, press center area where adhesive is exposed. Rub this area down from front to back with a **small paint roller for best results.**

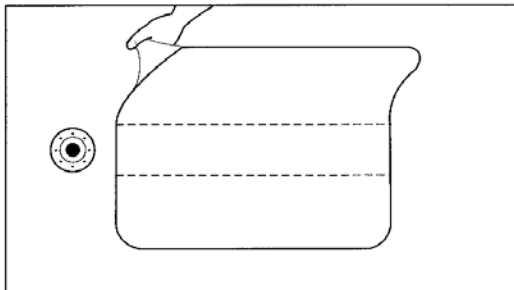

- 3** Your mat is now centered on the tub. Carefully fold back the upper section and remove the backing from it. Starting from the center, carefully lay down the adhesive area, and roll out from the middle of mat with the roller. Repeat this procedure for the bottom half of the mat.

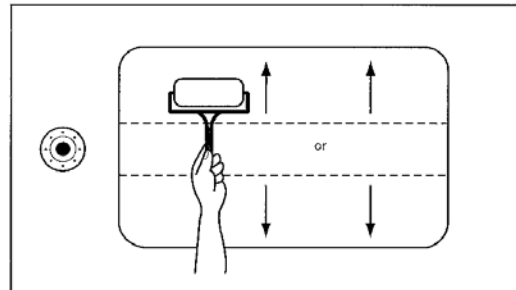

- 4** Finally, using the roller, make sure all **corners and edges are firmly pressed down.** The mat must be allowed to set for a minimum of **8 hours before getting wet** to allow the adhesive to set. For best results allow mat to set for 24 hours before use.